

LOC/DME	I-LHZ	APP CRS	Rwy Idg	5498
109.35		046°	TDZE	368
Chan 30 (Y)			Apt Elev	368

ILS or LOC RWY 5

TRIANGLE NORTH EXEC (LHZ)

DME or RADAR required.

NA


VDP NA when using Raleigh-Durham altimeter setting. When local altimeter setting not received, use Raleigh-Durham altimeter setting and increase ILS DA to 633 feet and all MDAs 80 feet; increase S-LOC and Circling visibility Cats C/D ¼ SM and JEBIX Fix Minimums: Circling visibility Cat C/D ¼ SM. For inop ALS when using Raleigh-Durham altimeter setting, increase S-ILS all Cats visibility to ½ SM, S-LOC Cats C/D visibility to 1½ SM and JEBIX Fix Minimums S-LOC Cats C/D visibility to 1½ SM.

MALSR

AS

MISSED APPROACH: Climb to 1400 then climbing right turn to 2600 on heading 190° and on RDU VORTAC R-092 to ZEBUL INT/RDU 19.6 DME and hold.

AWOS-3 118.325	RALEIGH APP CON 125.3 353.675	UNICOM 123.0 (CTAF)
-------------------	----------------------------------	------------------------

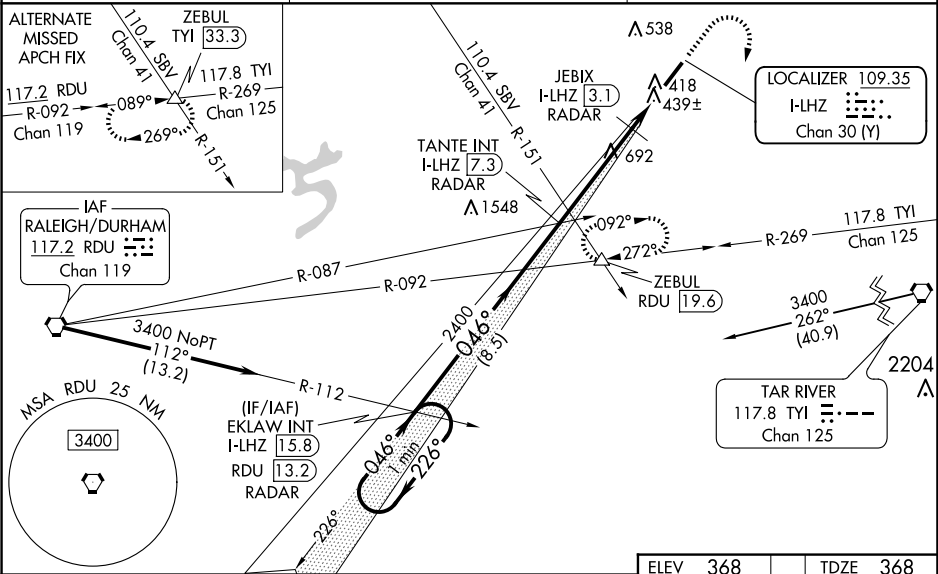

	ELEV 368	TDZE 368
	1400	2600
	hdg 190°	RDU R-092
	ZEBUL	
	One Minute Holding Pattern	EKLAW INT I-LHZ 15.8
	GS 3.00° TCH 39	TANTE INT I-LHZ 7.3
	2400	2400
	226°	046°
	046°	046°
	8.5 NM	4.3 NM
	1 NM	1 NM
	2400	#*960
	*LOC only	#1040 when using Raleigh-Durham altimeter setting.
	JEBIX I-LHZ 3.1	I-LHZ 2.1
	RADAR	I-LHZ 1.1
CATEGORY	A	B
S-ILS 5	568-½	200 (200-½)
S-LOC 5	960-½	592 (600-½)
CIRCLING	960-1	592 (600-1)
	JEBIX FIX MINIMUMS	
S-LOC 5	700-½	332 (400-½)
CIRCLING	800-1	432 (500-1)

